

# WARRANTY CLAIM FORM

Please fill out all boxes below [\*required], or your form will not be submitted. Original sales receipt and photos of your damaged product must also be submitted [see below]. Note: Warranties will not be honored without original receipt of purchase and images of the damaged product. Warranties do not apply to floor or display models, out-of-box models, close-out or discontinued items.

Name	<div>Timothy</div> <div>Erickson</div>
Email Address	<div></div>
Order Number	<div>14246</div>
Product	<div>Beavertail 35 Surface drive</div>
Select reason to request for warranty *	<div>Defective Item</div> <div></div>
Street Address *	<div>502 South Park Ave.</div>
City *	<div>Fond Du Lac</div>
State *	<div>Wisconsin</div>
Zip Code *	<div>54935</div>
Phone Number *	<div>20-921-5114</div>
Photo of Issue *	<div></div> <div>Browse...</div>
Receipt *	<div></div> <div>Browse...</div>
Details *	<div>Customer brought boat in complaining that when he went across the water the trim would quit working and that the clutch would kick out of gear. Technician talked to Kevin at Beavertail, Kevin sent new breakers and advised technician to go ahead and rewire shift plug</div>

SUBMIT