

# BEAVERTAIL

## Big Gunner Field Blind Instructions


1. Unpack and familiarize yourself with the parts. Slip the seat cover over the plastic seat and attach with 4 self tapping screws. There are two grommets on the back and one on each side at the bottom to use for attaching the seat cover.



Plastic seat and seat cover.



Seat cover in position on plastic seat.

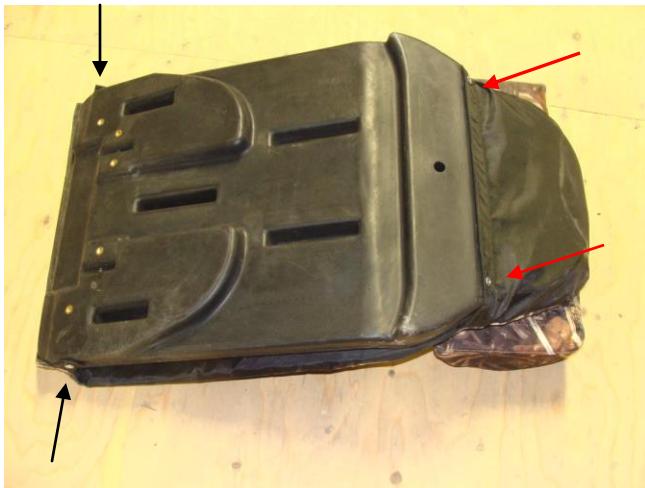


Attach seat cover with self-tapping screws at the grommets.




Seat cover attached on the side near the bottom.




2. Position the two halves of the blind frame as shown and slide them together until the spring loaded snap button locks into place. Slide backrest under cross member and align springs and brackets.

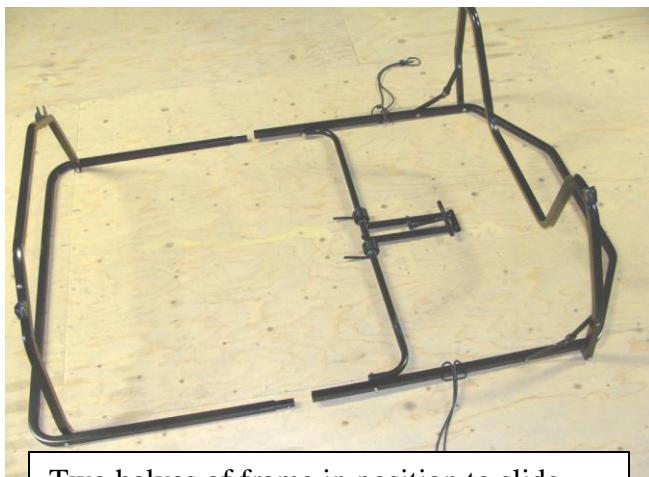


Two halves of frame in position to slide together.

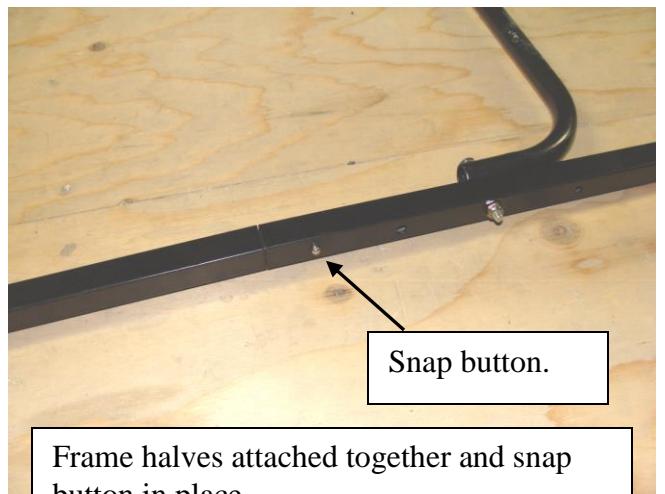

Frame halves attached together and snap button in place.

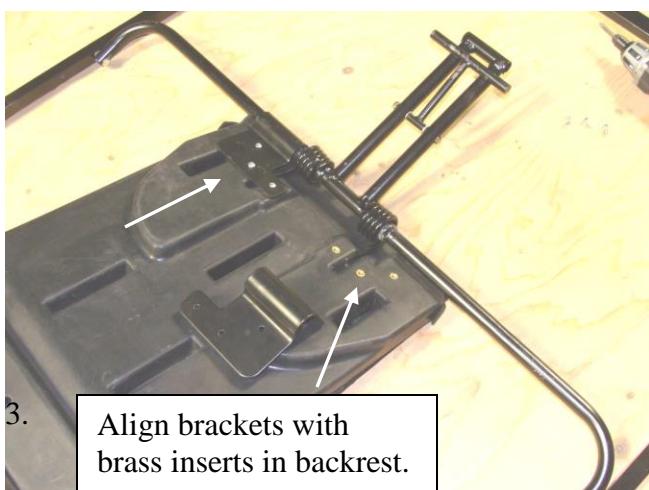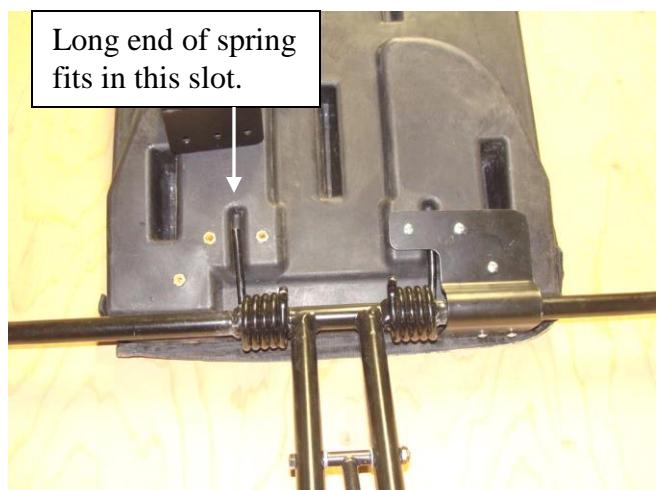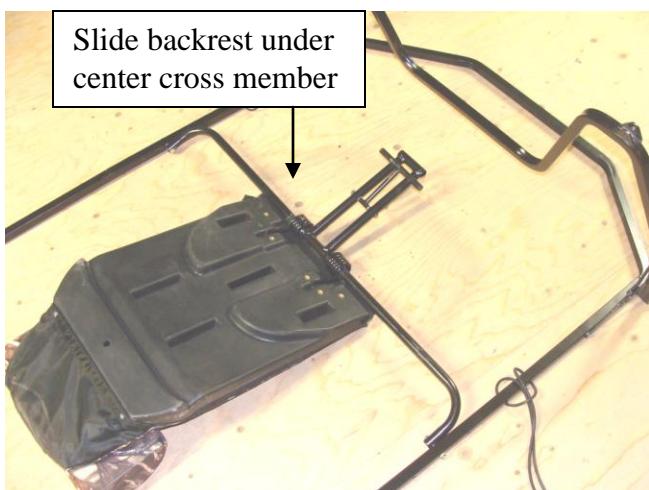

3. Align brackets with brass inserts in backrest.

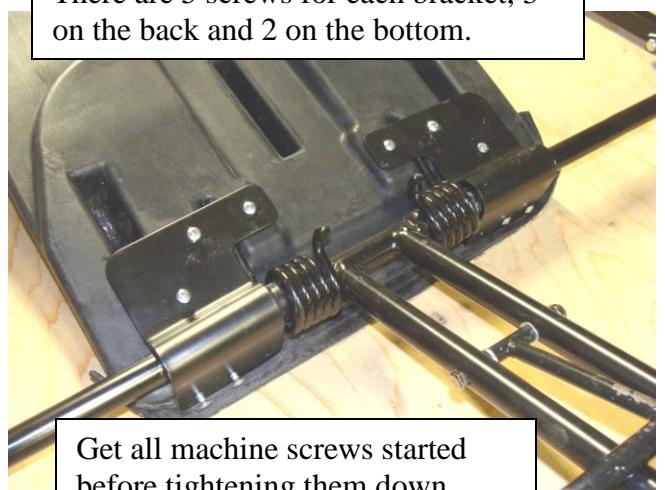

Get all machine screws started before tightening them down.



3. Layout blind fabric as shown and slide framework into the blind interior bottom first.




4. Slip fabric over the knee bar and the head rest bar and secure with Velcro straps. Secure bottom frame with Velcro as well.





5. Assemble the door frames as shown in the pictures below. Slide one inside the other until the snap button locks into place.

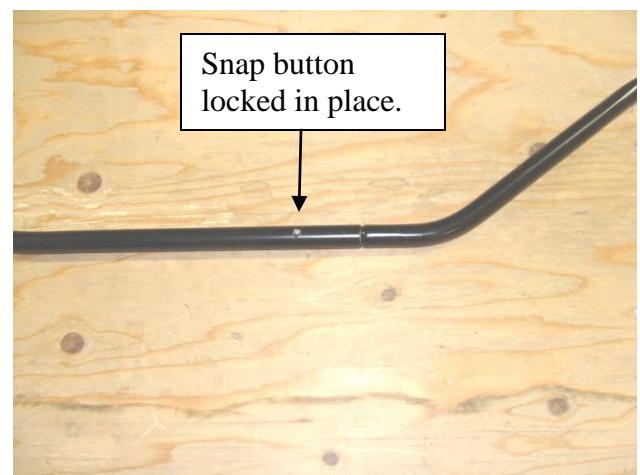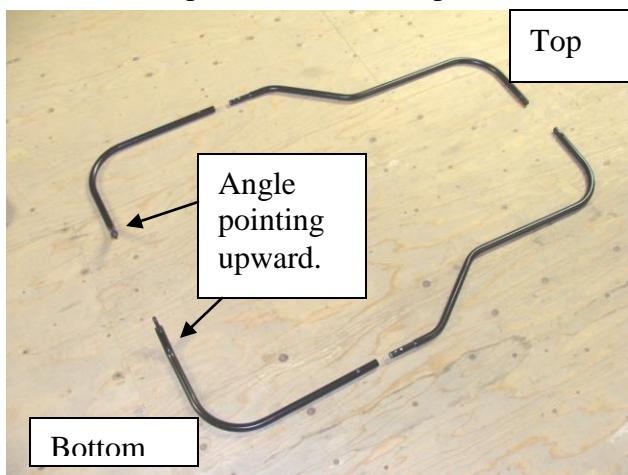


6. Slide door frame inside the fabric as shown. Make sure the tube goes above the door handle when sliding it through. Repeat on other side.

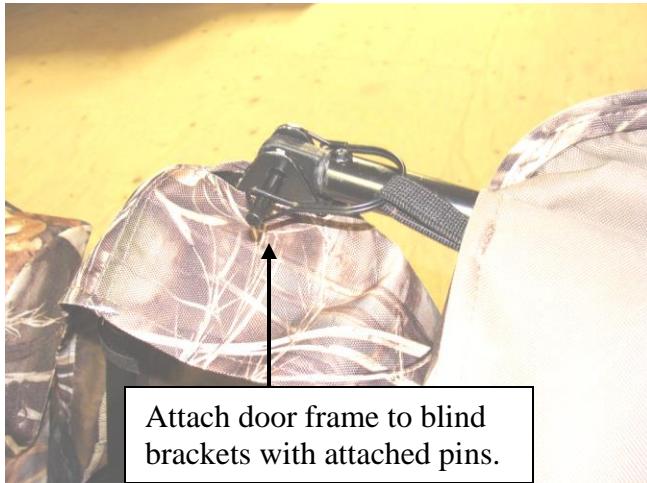


7. The blind may be used in the spring loaded position (provides lift) or the unloaded position (no lift provided). Rotate T-bar to engage or disengage.

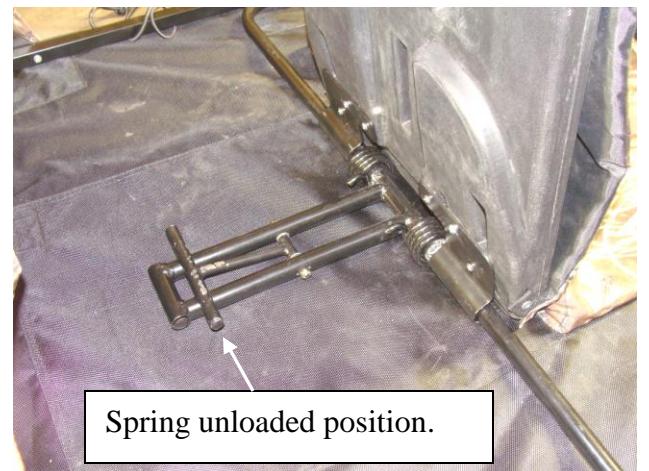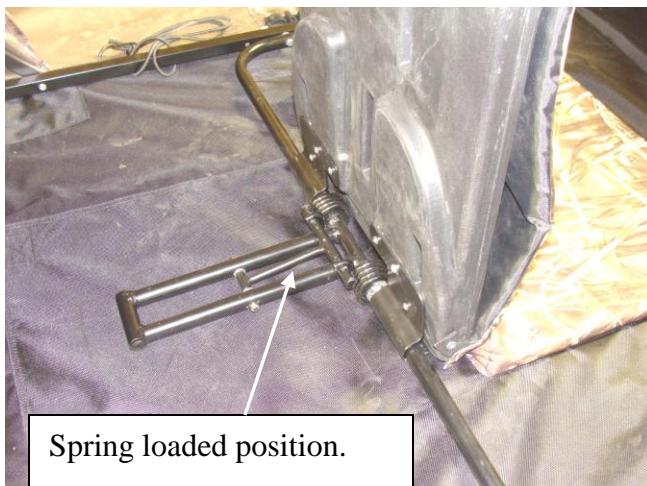

## 8. Other useful features:

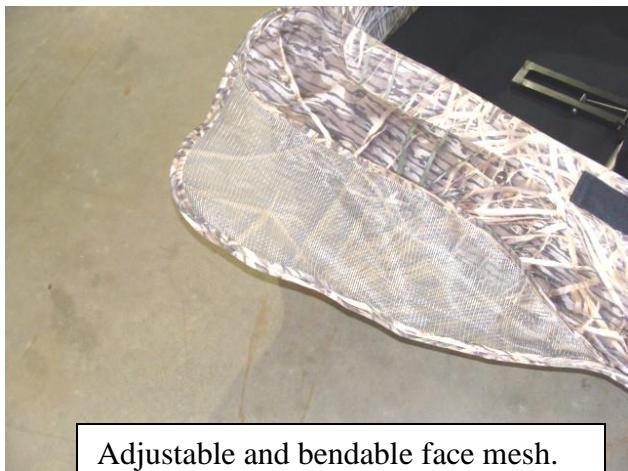


Adjustable and bendable face mesh.

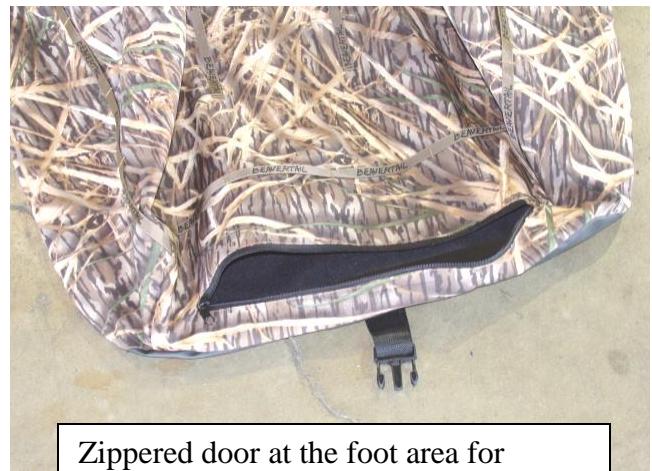

Zippered door at the foot area for cleaning out the blind.



Side shell holders and storage pocket.  
Flagging slot located just above it.

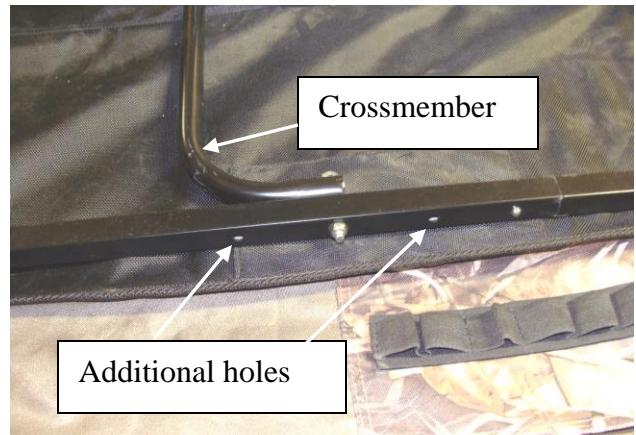

Crossmember

Additional holes

The angle of the backrest may be adjusted by moving the center cross member either forward or backward.



Adjustable and removable seat pad.



Adjustable back pack straps.

**9. Folding up the blind:** Remove the door panels and lay off to the side. Flip the T-bar into the unloaded position, lower headrest bar and the knee bar to the down position. Lower backrest to the down position, it rests on top of the headrest bar. Move doors inward on top of the blind.



Doors removed and off to the side.  
Head rest bar and knee bar in the  
down position.



Doors folded inward on top of  
blind.



Fold foot area material up and over onto the top of  
the blind and connect the latch. Cinch tight.