





The X-Terminator™ Installation and Set-Up Instructions

PARTS LIST


Item #	Qty	Description
1	1	Blind
2	4	Clip pin
3	2	Elastic strap
4	2	Removable shell loop

Tools Required:


No tools required

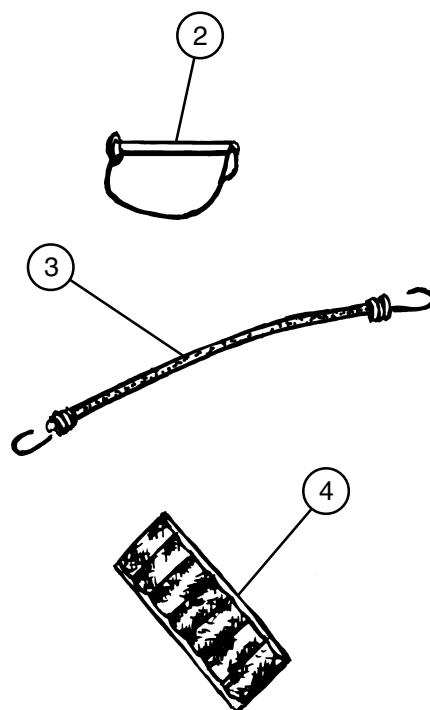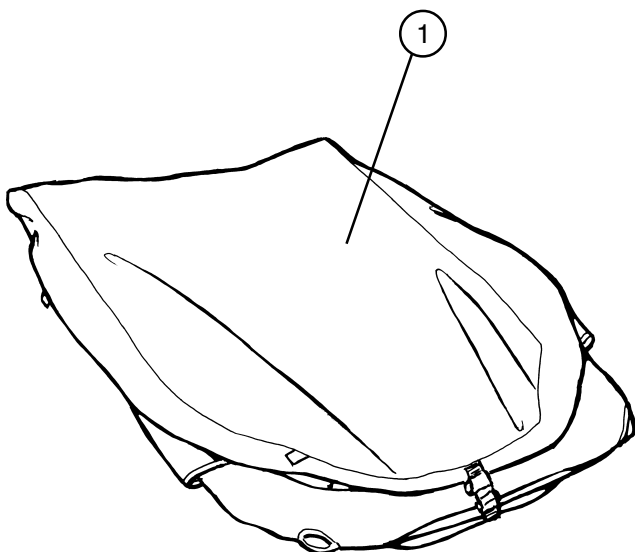


1. Unfasten buckle (item 1) and unfold blind completely. Remove roof panels (item 2) from under seat and extend out to the sides.

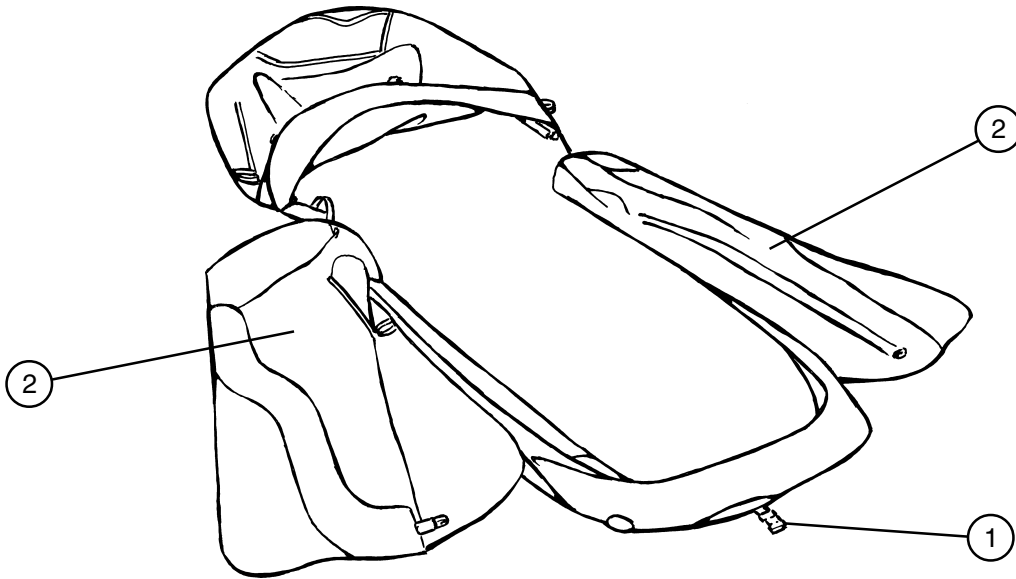


2. Lift up on center support frame (item 1). Lift backrest (item 2) and push back slightly on lower backrest frame to allow backrest to become completely vertical. Attach left and right roof panels (item 3) to frame by inserting clip pins (item 4) through u-shaped hinge brackets (item 5) on frame and then inserting through roof panel tubing (item 6). Fasten clip to pin.

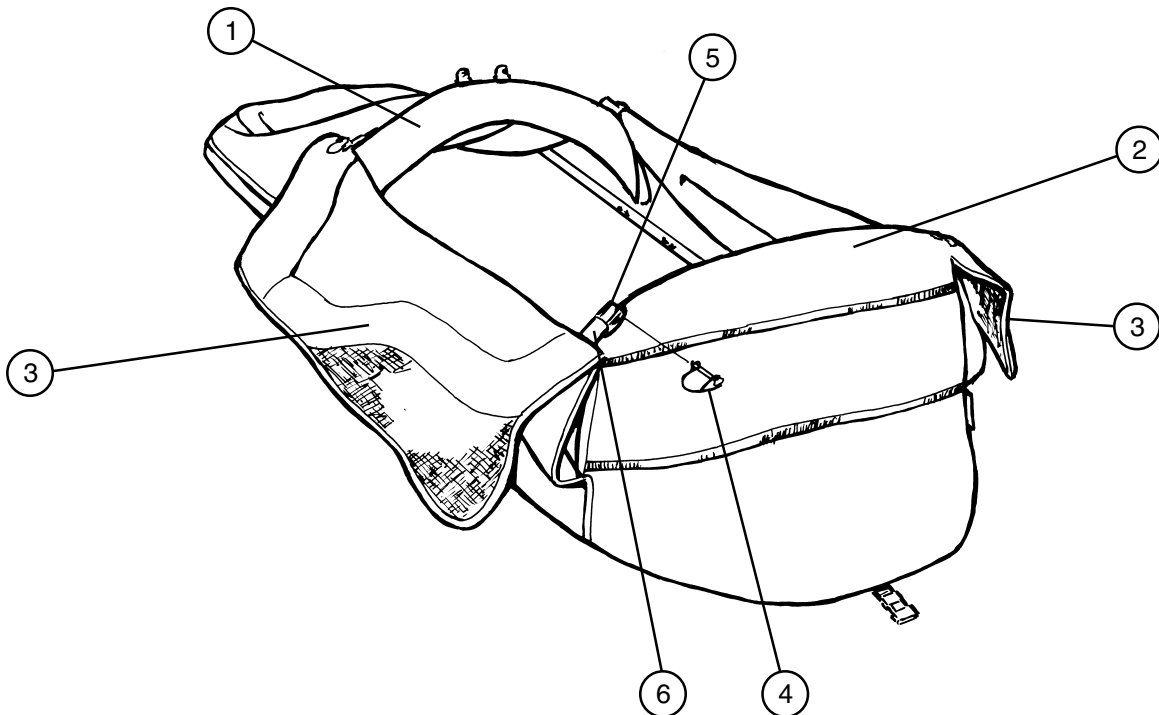

3. Attach one end of the elastic strap (item 1) to the tubing (item 2) on the bottom of the blind and the other end to the tubing on the roof panel (item 3).

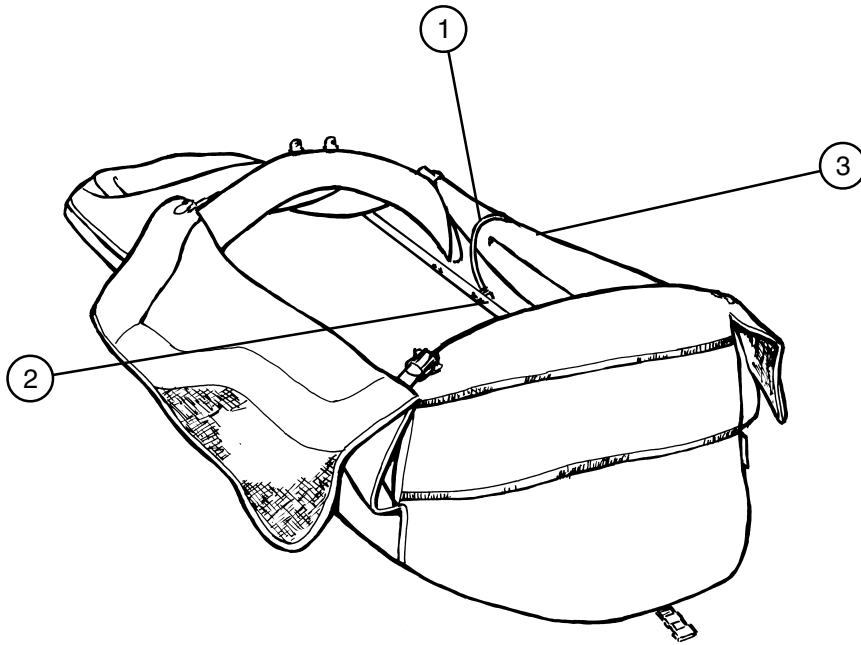


4. Close roof panels.

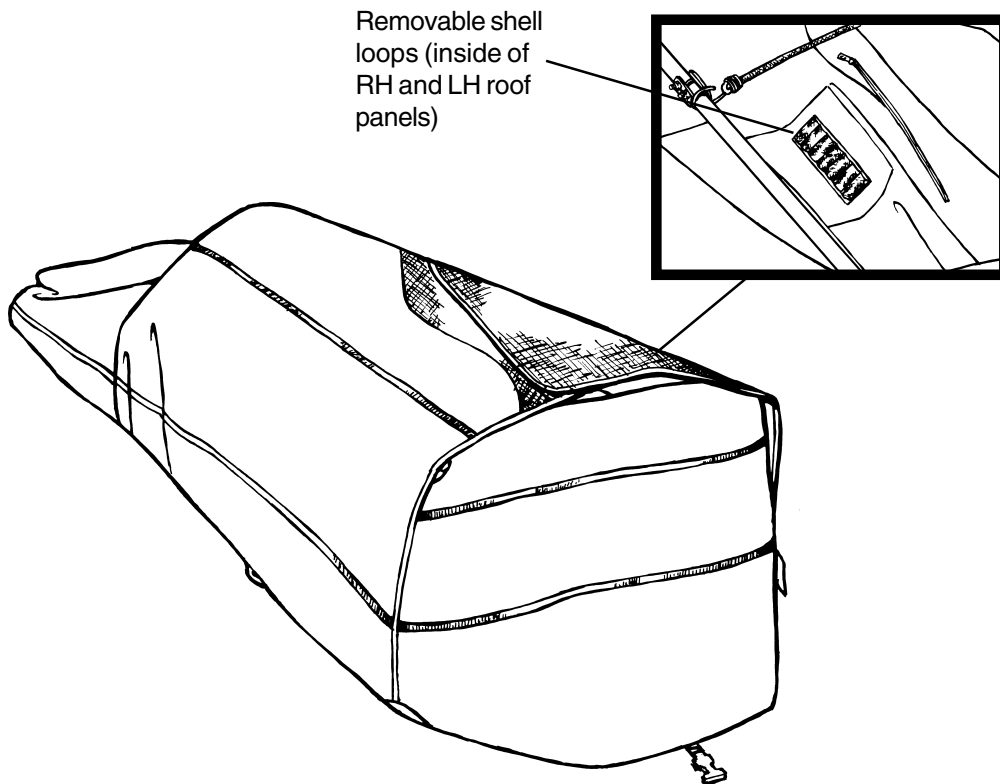


Take down:

1. Reverse the order for set-up. Slide the roof panels (Item 1) **underneath the backrest** (Item 2) ensuring that the tubing side is up as shown. Collapse the backrest (Item 2) over the top of the roof panels.

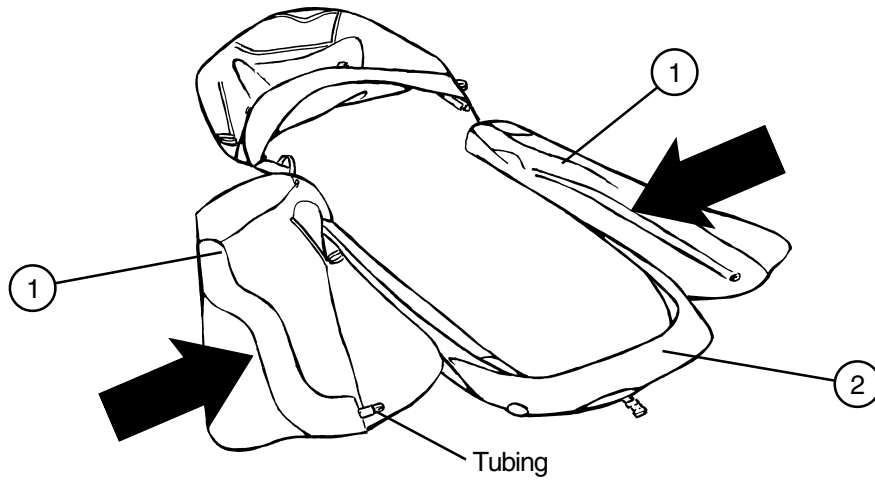

2. Fold the blind and latch the buckle (item 1) to hold the blind together. The nylon straps (item 2) can be used to carry the blind on your back.

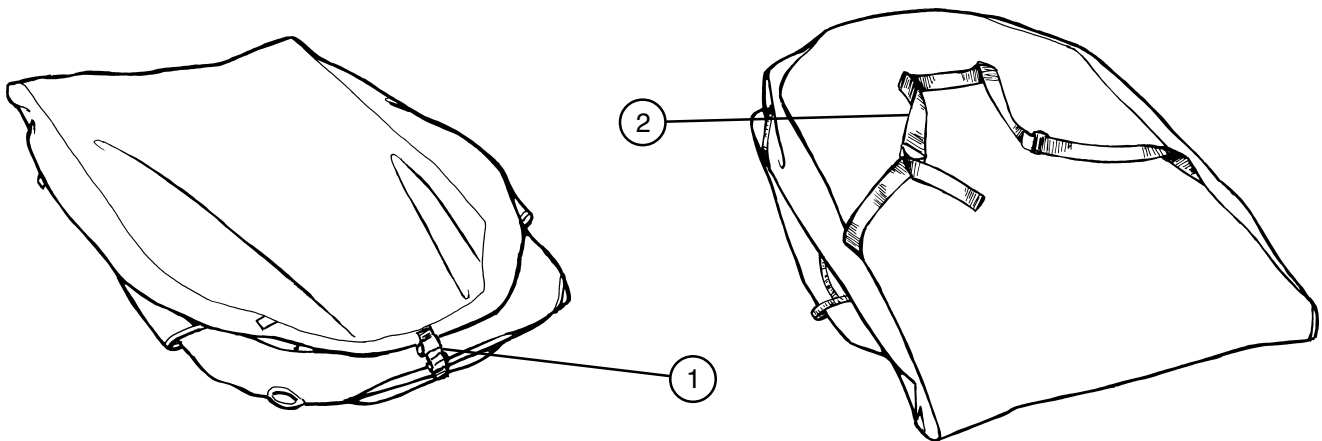

Before you enter the field:

- Practice entering and exiting your blind with and without a gun.
- Make sure all fasteners on the blind are secure.
- Never have your blind facing towards another hunter.
- Never use the backrest or center support frame to lift yourself out of the blind.
- Never use your blind on concrete, asphalt or gravel or damage to the floor will result.
- Don't force a zipper that is jammed with mud or damage will result.
- Level off the area prior to placing your blind on the ground.