

BEAVERTAIL

Stealth 1200 & 2000 Boat Blind Instructions

PARTS LIST

Item #	Qty	Description	
1.	2	Canvas Blind (there are two halves which is the qty of 2)	Part #401523
2.	8	Bottom Tubes	Complete set of tubes is part #401525
3.	4	Top Tubes	
4.	8	Hinge Brackets with Bolt,	Part #501522
5.	8	Self drilling screws	Hardware bag, Part #401524, includes items 4-8.
6.	16	#10 x 3/4" Screw	
7.	2	#10 x 1 1/4" Screw (Used with the plastic block)	
8.	1	Plastic Block (Used only if a motor mount is used on the boat.)	



Tools required

Cordless Drill with a Phillips bit
Phillips screwdriver
Flat blade screwdriver


1. Layout the two bottom poles and the top section. Slide the bottom section onto the top section and attach with the self drilling screws. Do this for all four frame poles.




2. Layout one half of the blind canvas and locate the dog door. Slide the main frame tube up through the sleeves as shown. Next do the same on the front section so the poles are secured in the sleeves as shown. Repeat this procedure for the second half of the blind.

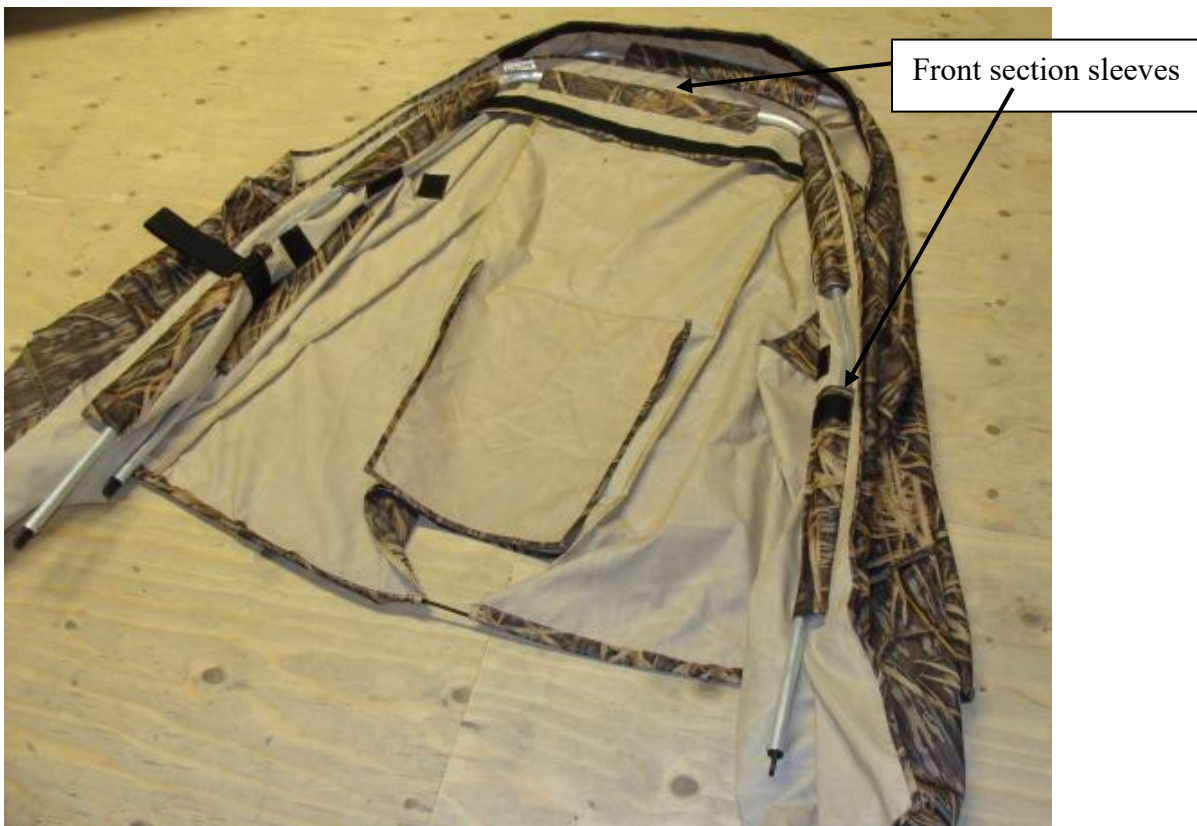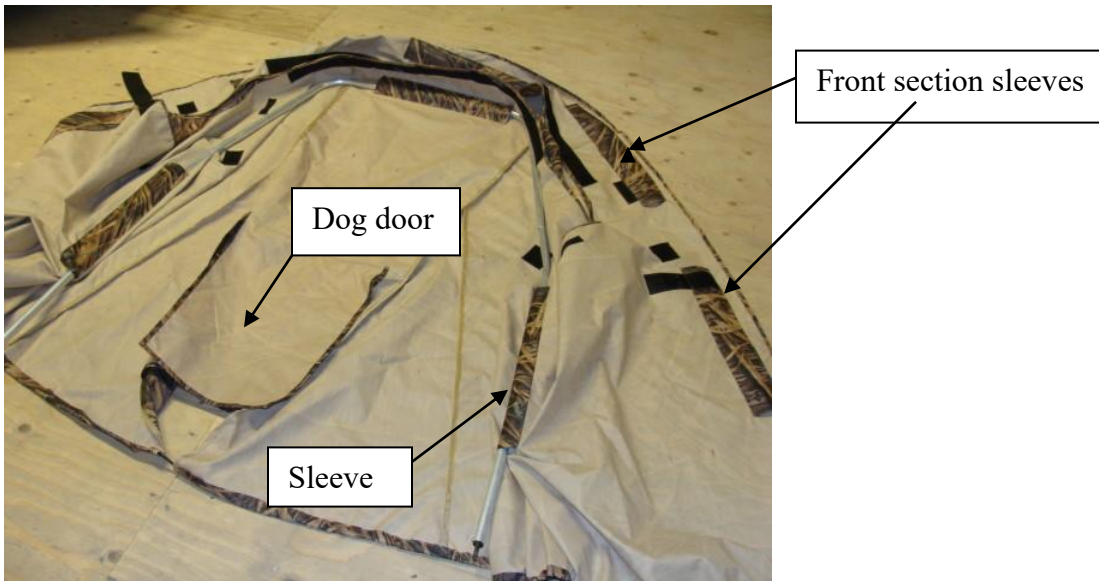

3. Measure 55" from the front of the boat (2000), or 57" for the 1200, and lay a straight edge across the boat. Set the hinge brackets up against the straight edge and attach them using the 3/4" screws and the cordless drill with the Phillips bit.

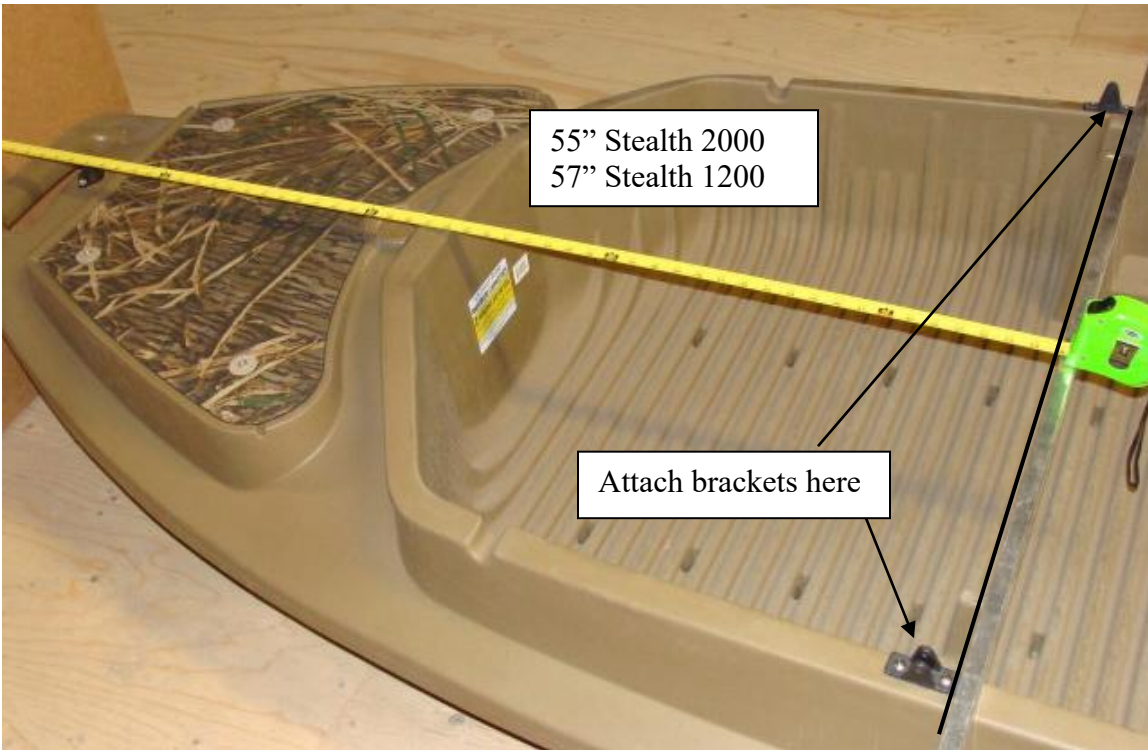



4. Measure 17 1/2" from the edge of the brackets (2000) , 15 1/2" (1200) and place the straight edge across the boat and attach two more brackets as shown using the 3/4" screws.

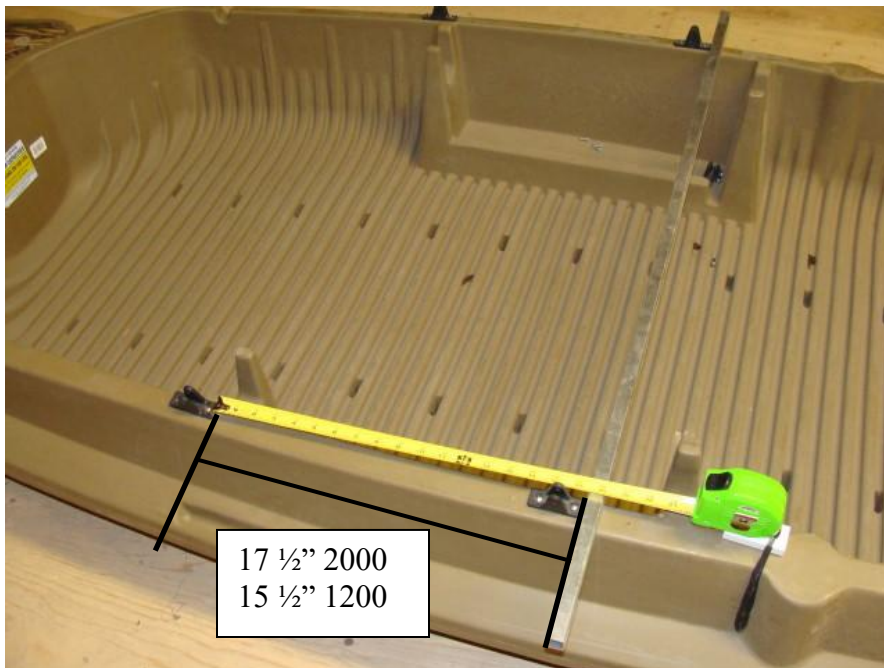

5. Measure 55" from the back of the boat and lay the straight edge across the boat. Attach two more hinge brackets. **Note: If using a trolling motor mount attach the mount before attaching the brackets. The plastic block will be installed under the hinge bracket on the left side as shown and the other bracket will mount on top of the motor mount.**



6. Measure 17 1/2" from the brackets and lay the straight edge across the boat. Mount the final two brackets as shown, one on each side.

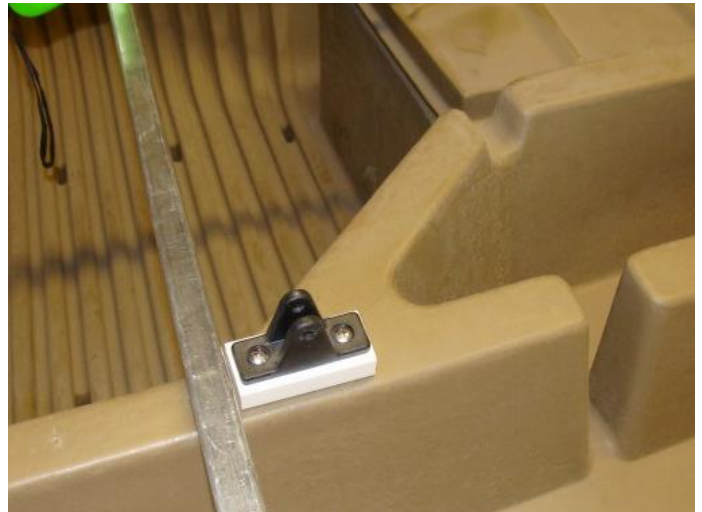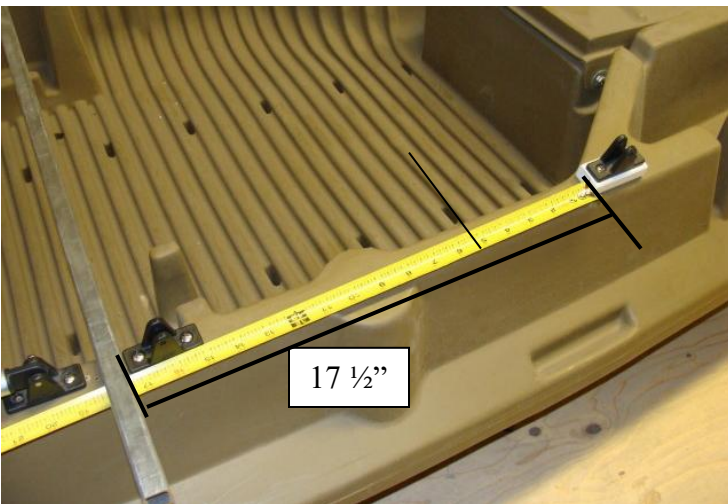

7. Attach the poles with the blind to the brackets as shown. The rear pole attaches to the rear brackets and the front pole attaches to the next forward bracket.




8. Slip the opening just below the dog door over the handle on the boat. Do this on both ends of the boat. The blind can now be raised and secured in position with the Velcro handle.



9. Attach the roof panels to the blind using the Velcro.



10. Attach the screen side windows using the Velcro.

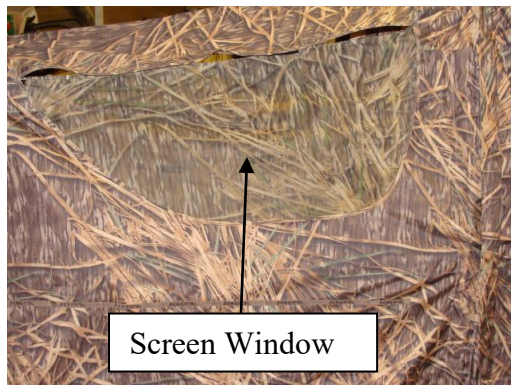



Completed Blind

Tips

- Use mud to reduce any shine of the fabric. All of the outfitters and guides routinely do this.
- Utilize the vegetation straps to make the boat nearly invisible to the birds.
- The screws on the brackets may be replaced with pins by drilling a bigger hole for the pin. This makes removing and attaching the blind easier and faster.
- Do not store the blind wet. Allow it to dry out before storing.