

BEAVERTAIL

Final Attack Backrest Instructions

(Shown with optional blind)



PARTS LIST

Item #	Qty	Description
1.	1	Plastic Backrest
2.	2	5/16" x 4" Ball Detent Pins


Tools required

Drill and 5/16" drill bit

1. Locate hole at the back of the cockpit. This hole should be 3/4" in diameter. If necessary drill out to 3/4". The plastic pin under the backrest bracket will fit down into this hole. Push backrest down onto the cockpit lip as far as it will go with plastic pin in the hole.

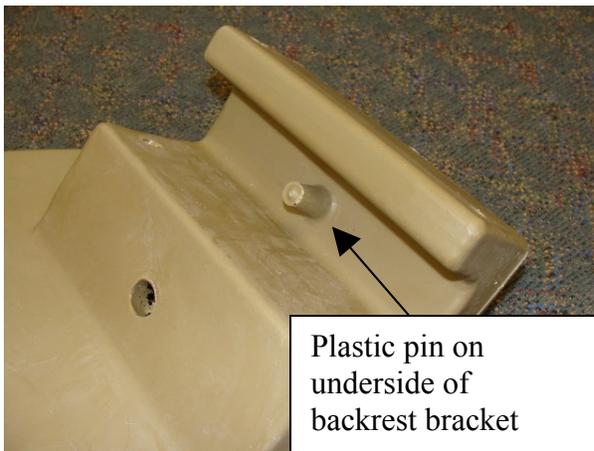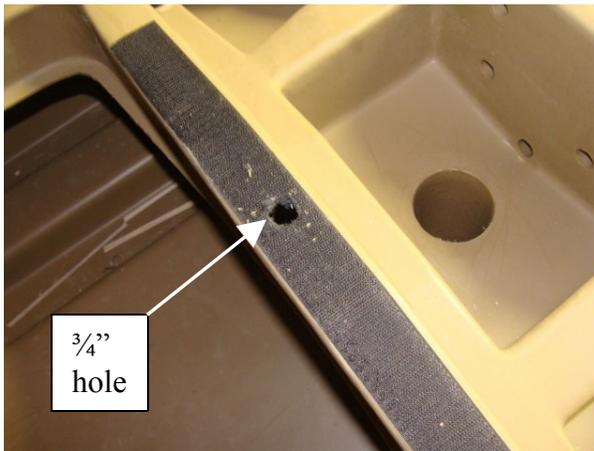

2. Mark a spot 1" up from the bottom of the backrest bracket and 1/2" in from the side of the bracket. Repeat on the other end of bracket. Drill a 5/16" hole through the backrest bracket and all the way through the lip of the cockpit, both the outside and the inside. The holes will be angled slightly downward. Push one of the 5/16" detent pins into the hole to lock the backrest in place. Drill the second 5/16" hole.

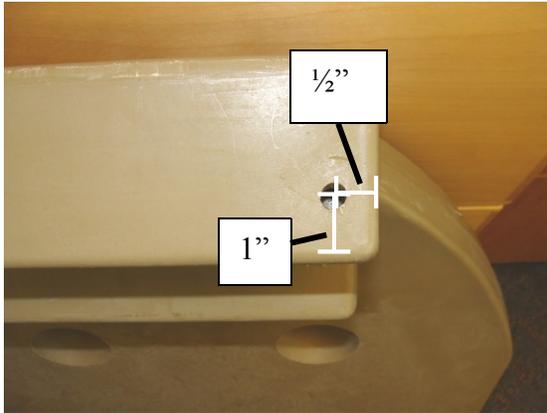

3. Insert the second 5/16" pin into the last hole. The backrest should now be fully locked into place.

