

# BEAVERTAIL

## Instructions Stealth 2000 Layout Blind



### PARTS LIST

Item #	Qty	Description
1.	2	Door Frame Bottom
2.	2	Door Frame Top (black powder coating)
3.	1	Brace Tube
4.	1	Blind Canvas
5.	1	Adjustable Backrest
		Hardware Bag (items listed below)
6.	4	Hinge Brackets
7.	4	Locking Pins
8.	8	3/4" Stainless Screws
9.	2	Small Black Screws
10.	2	3/4" Self-tapping screws (use is optional)


### Tools required

Cordless Drill/Driver  
Long Phillips Bit  
Marker  
Tape Measure





1. Layout door frame pieces top and bottom as shown. Line up the predrilled holes and slide the pieces together. Tighten securely with the small black screws. For a more secure hold the optional  $\frac{3}{4}$ " self tapping screws may be installed on the opposite side.

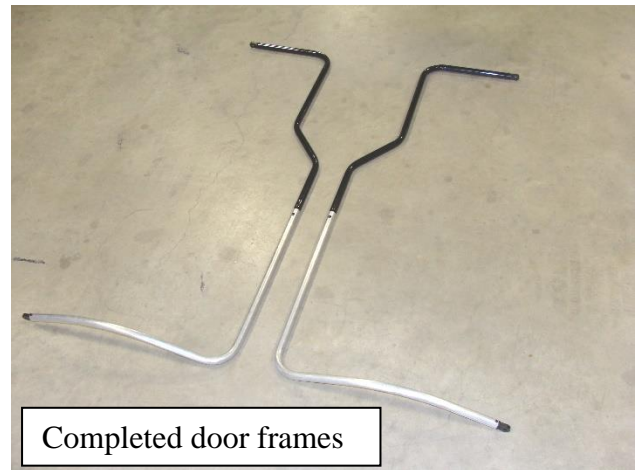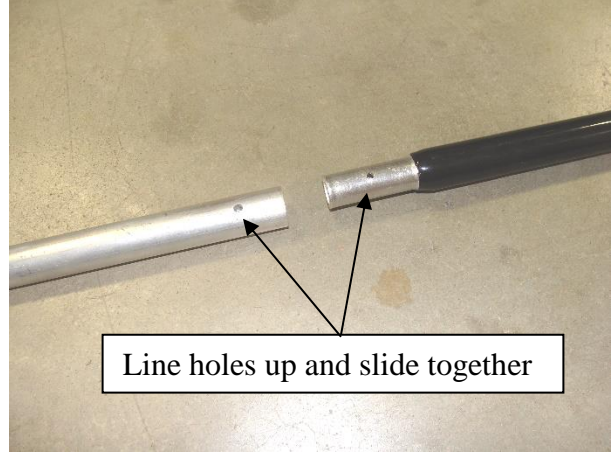

2. Attach the hinge brackets to the boat, center the bracket in the round area near the center of the boat. Place bracket  $\frac{1}{2}$ "- $\frac{3}{4}$ " from the boat edge and mark the two holes as shown below. Secure bracket with the  $\frac{3}{4}$ " stainless steel screws.

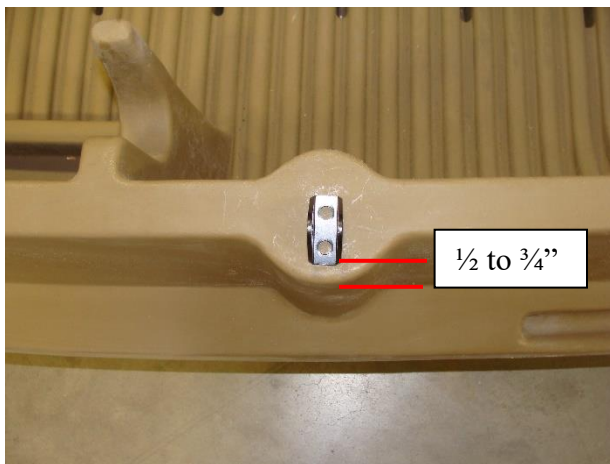

3. Attach door frame to bracket at center of boat using the locking pin and place 2 x 4 across the boat to help support it. Attach another bracket to the other end of the door frame and align it on cockpit edge as shown. Mark location and secure bracket with two 3/4" stainless steel screws. Repeat the process for the other door.

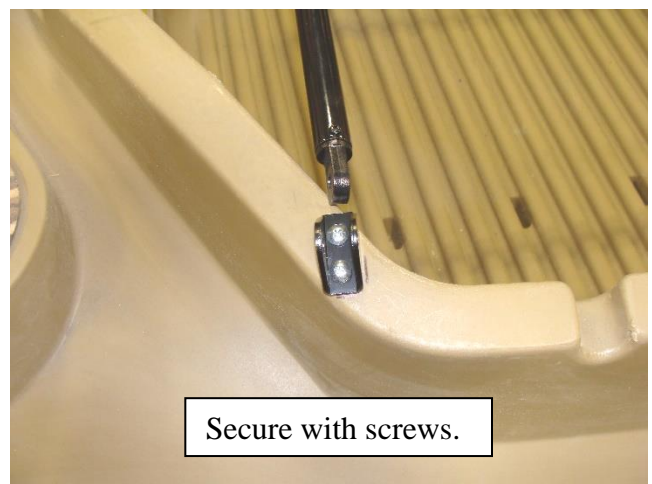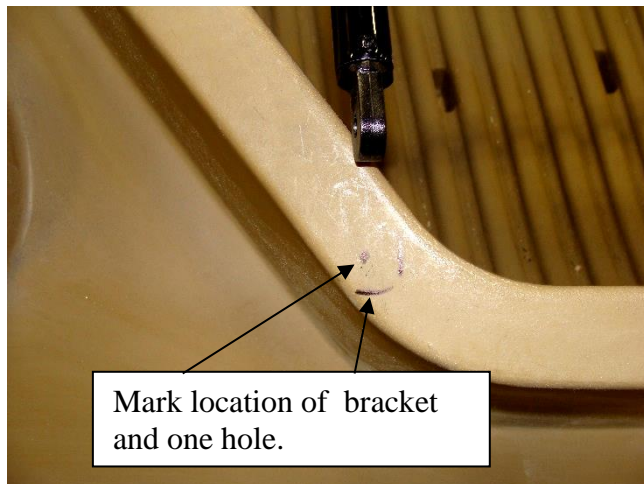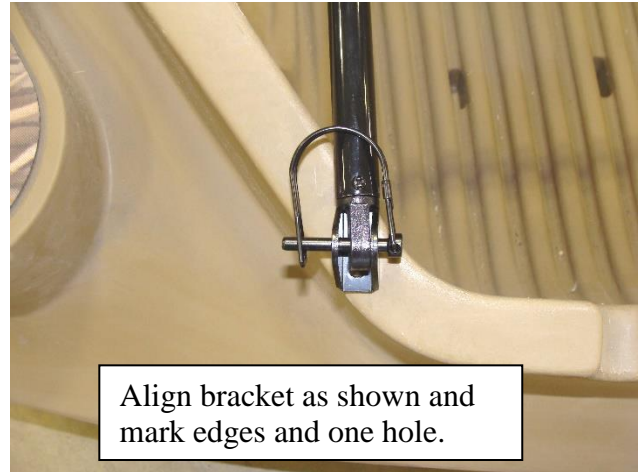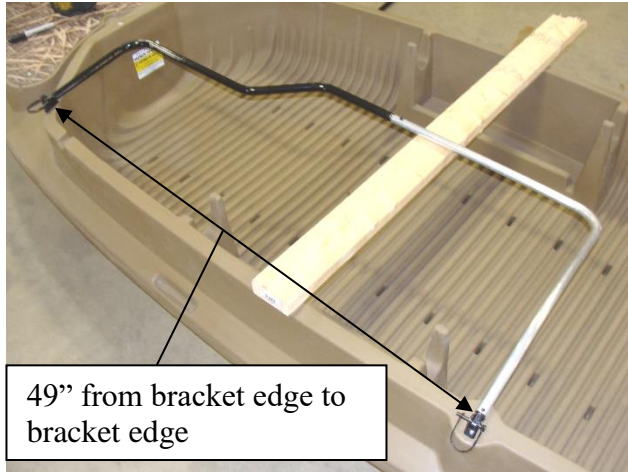

**4. Note: This will adjust the height of the door frames.**

To raise the height of the door frame, loosen the top nut and push the bolt downward until the nut contacts the tube. Then lightly tighten the bottom nut against the tube to hold it in place. Once the desired height of the doors is determined the nuts may be securely tightened against the tube using two 7/16" wrenches.



Push bolt downward after loosening the top nut and then tighten the bottom nut against the tube.



5. Install support brace as shown. Loop bottom seat straps around the tube and latch. Loop top seat straps around the boat handle at the boat front and latch. Adjust as necessary for a comfortable fit.



6. Locate seat access zipper on the blind canvas. Fit this area over the seat and hook shock cord sewn into the hem over the back boat handle. Stretch canvas out and hook the other end over the front handle. Fold doors out to the side. Detach door frames and slide into the sewn pockets. Reattach the door frames to the brackets.

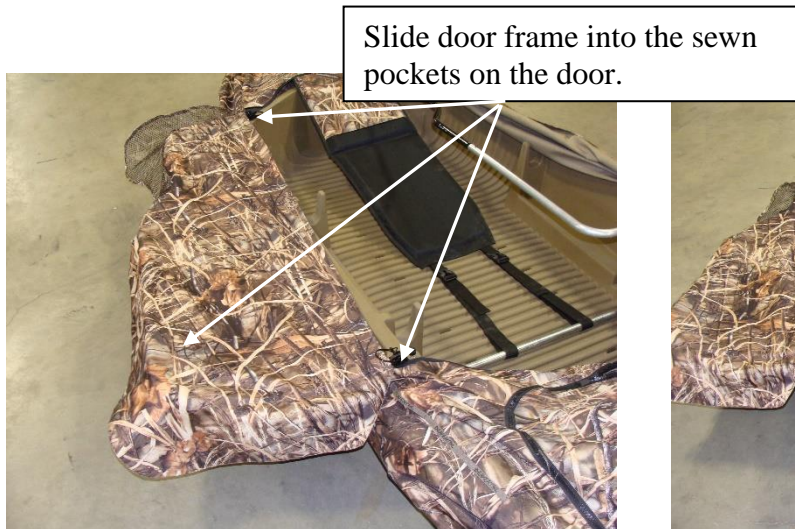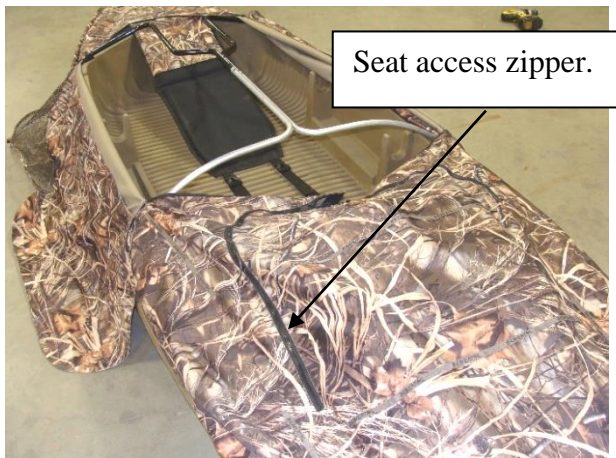



Completed blind.

## Care, Cleaning and Hints

1. Allow canvas to dry before storing. Do not store wet.
2. Utilize the vegetation straps to increase the effectiveness of the blind.
3. Use mud or a light dusting of brown camo paint to reduce any shine of the fabric when the blind is new.
4. Adjust door height for the best or desired fit.
5. Zipper allows easy access to the seat for paddling or motoring the boat.
6. Quick detach pins allow easy removal of door frames if necessary.